



Step 1: Dig 550mm deep holes in ground. The holes should be big and deep enough for 120x60mm post. Distance between of holes are 1810mm.

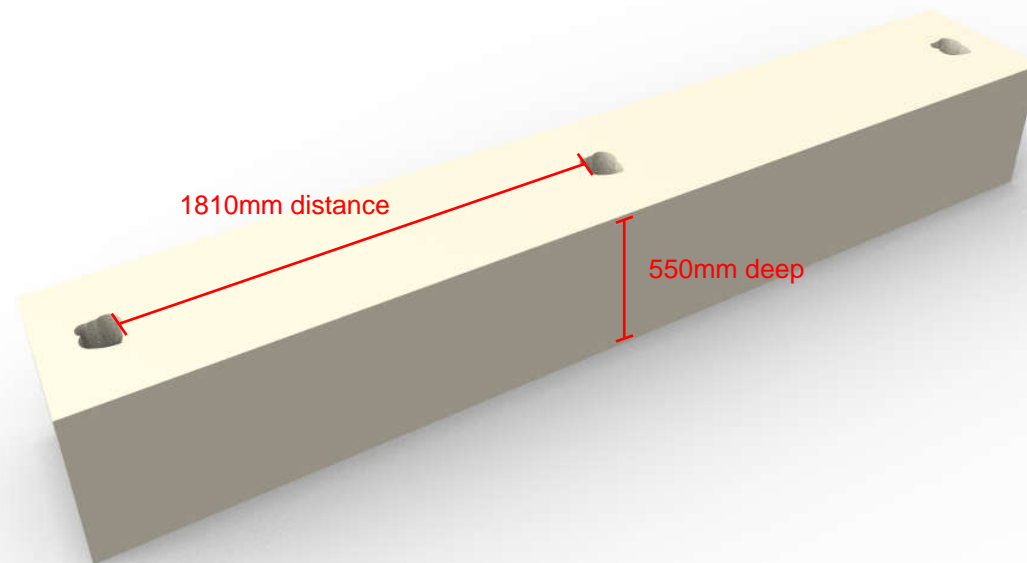

Step 2: Make sure the black plastic cap is installed on the top of post. Put the post bottom 550mm in hole vertically.


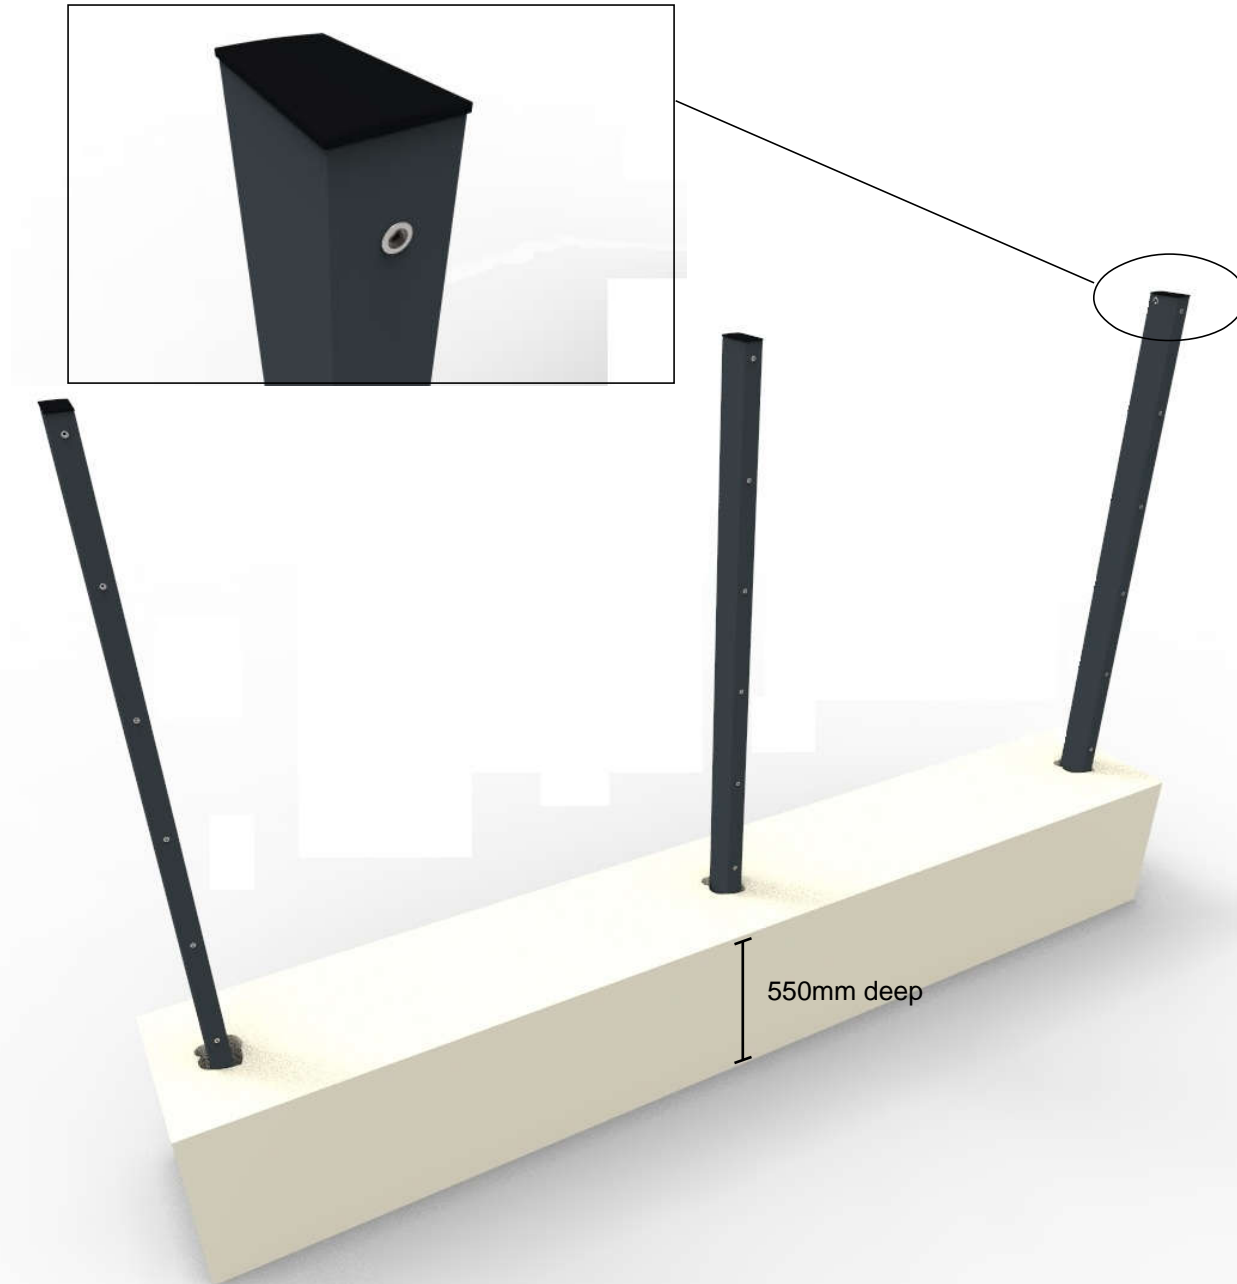



ECOMPOSITE
PRODUCTS




MEDIEVAL
RANGE

Step 3: Cast concrete in hole, at the same time ensure post position doesn't change. Await for concrete to solidify.

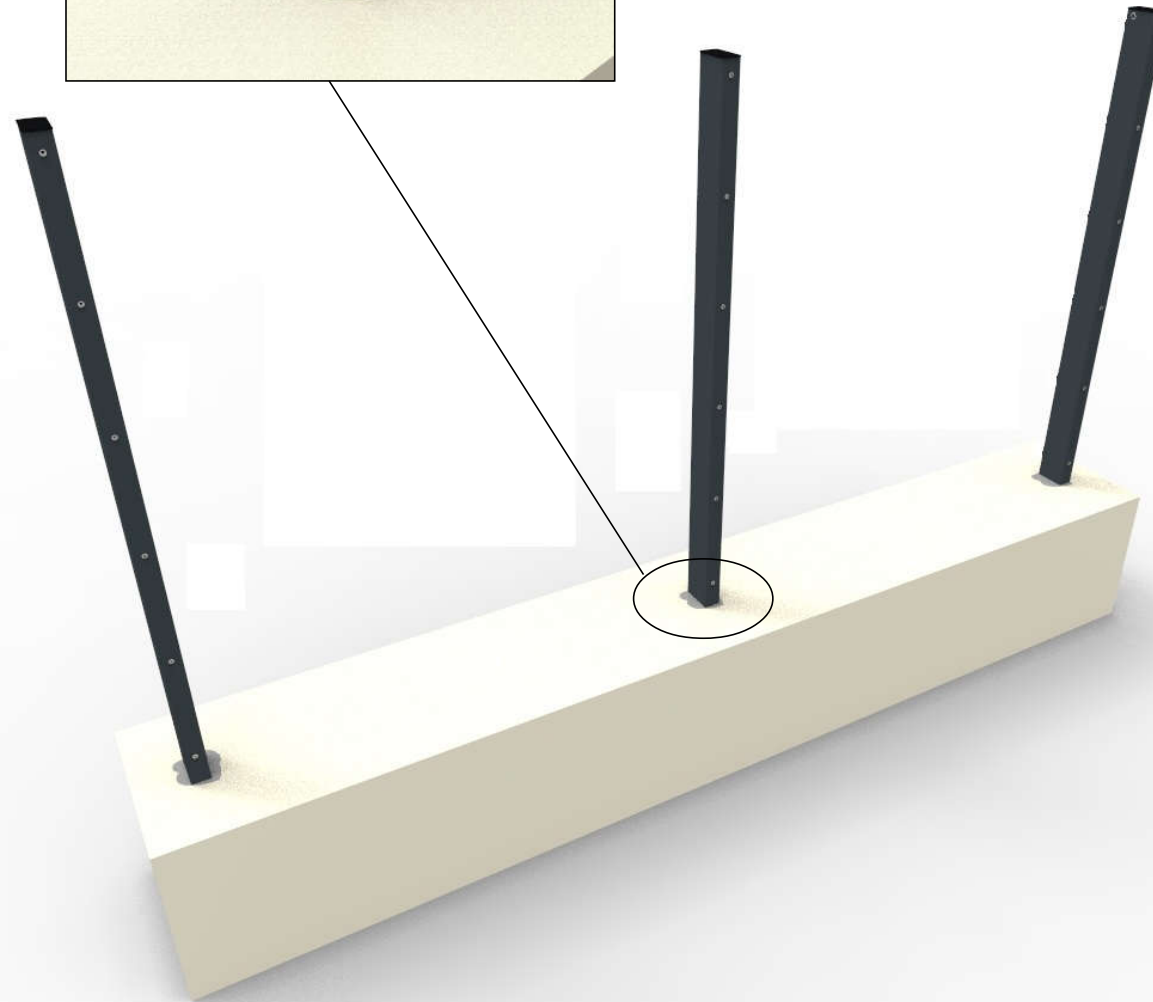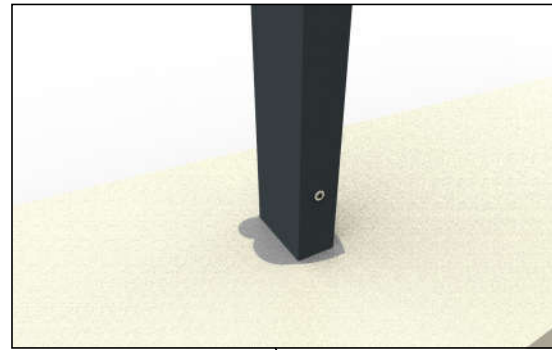


MEDIEVAL
RANGE

Step 4: The rivet nuts were set in post by supplier in advance. Use claw clamp, screw, washer, gasket to fix 2pcs mesh panels on each side of post.

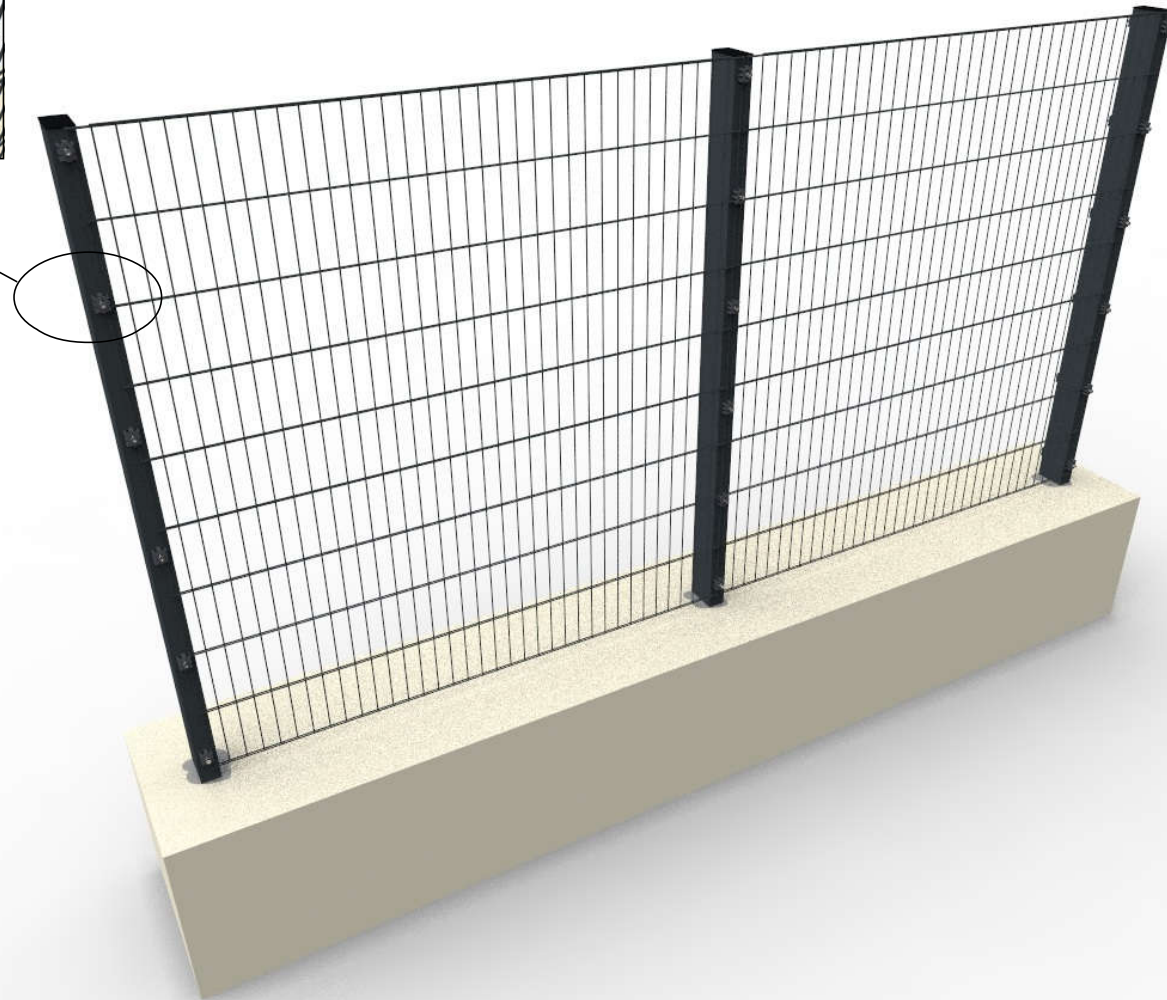


MEDIEVAL
RANGE

Step 5: After installing mesh panel, fill decoration in gabion wall and use long C hook to pull 2 sides mesh panels to prevent them from bowing out.

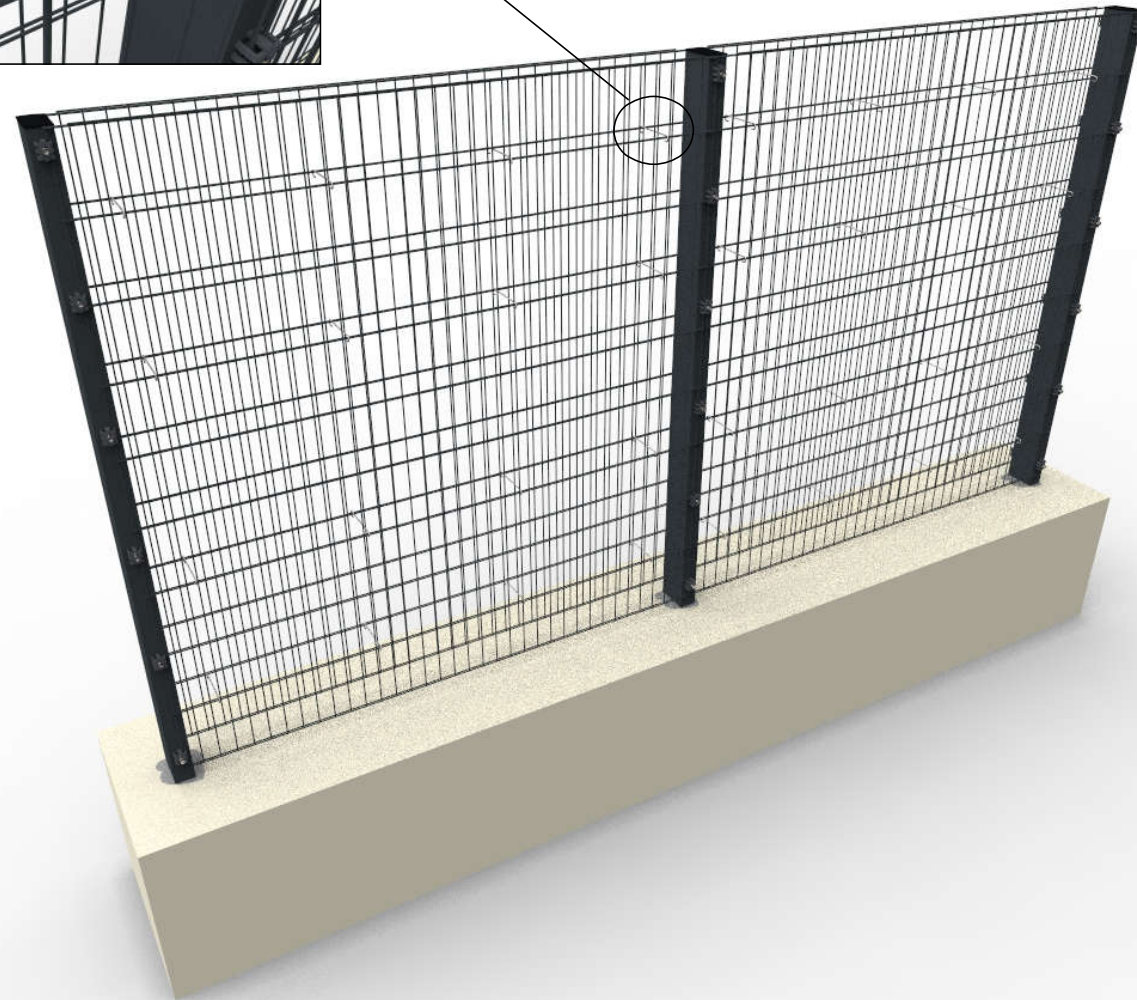

MEDIEVAL
RANGE

Step 6: After filling decorations, put top cover mesh panel on the top. Use small c clip to connect the side wire of small mesh panel and big mesh panel.

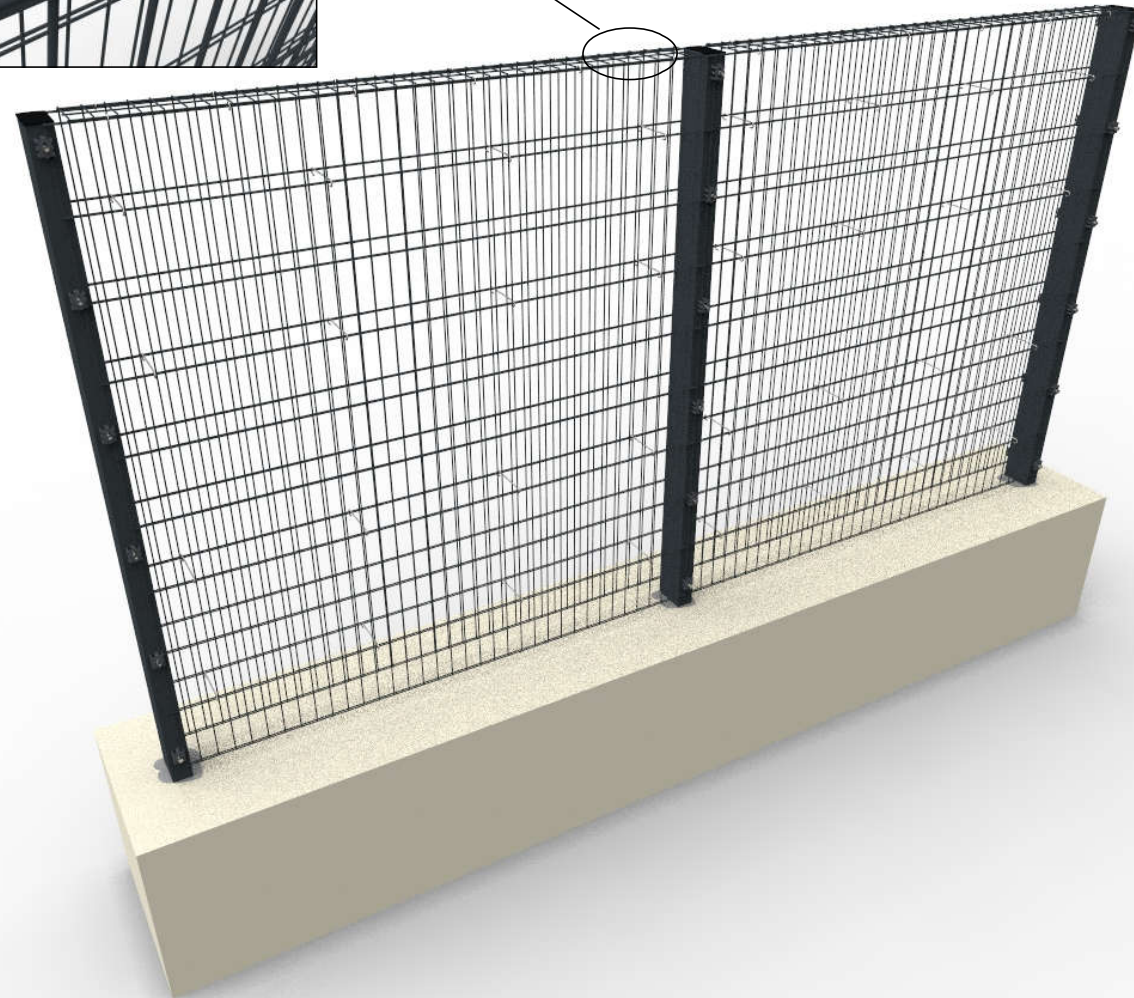

MEDIEVAL
RANGE