

# 1. CHECK GATE WIDTH






**2: MARK LOWER BRACKET**

## NOTES

**2 X PLACES  
10MM DRILL**

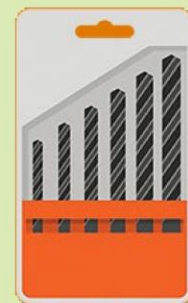





### 3. PRE-ASSEMBLE LOWER SPIGGOT

**M10 BOLTS  
2 x PLACES**



**4. FIX LOWER HINGE TO FLOOR**

## 5. LOAD GATE -HOLD SQUARE

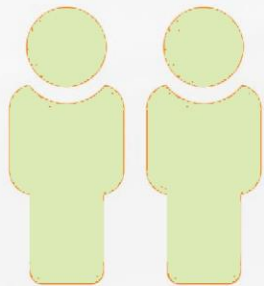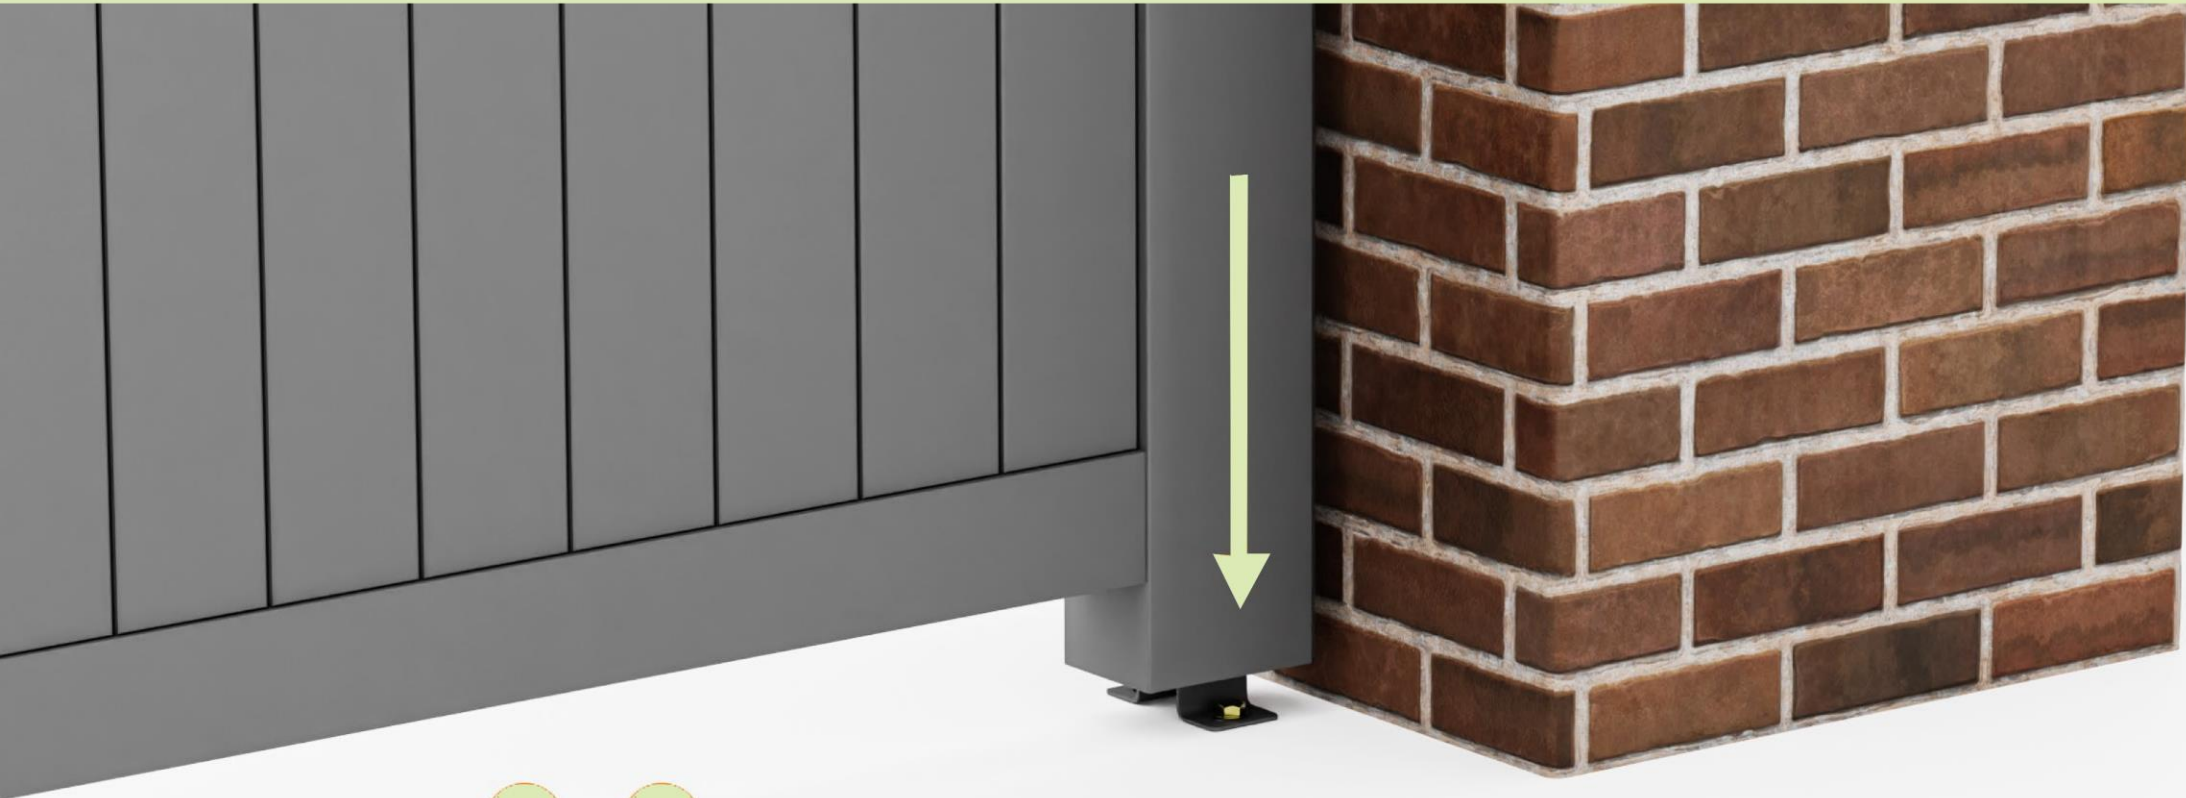

**TWO PERSON LIFT ADVISED**

## 6. ASSEMBLE UPPER SPIGGOT



**NOTES**

**OPPOSITE TO LOWER BRACKET**

## 7. MARK UPPER BRACKET



## NOTES

**HOLD GATE SQUARE  
MARK 2 X PLACES**






## 8. DRILL HOLES X 2

### NOTES

10MM DRILL  
50MM MIN DEPTH

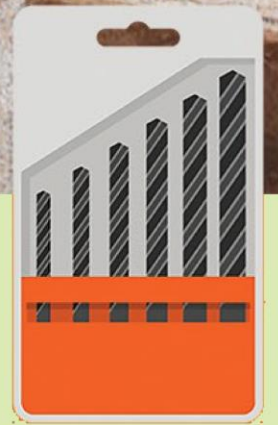







## 9. FIX UPPER HINGE


**REPEAT  
STEP 2 TO 9  
FOR LH GATE**

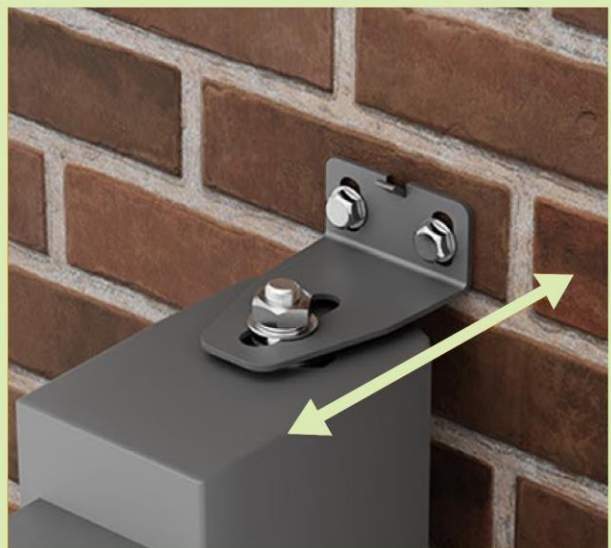

**2 X PLACES**

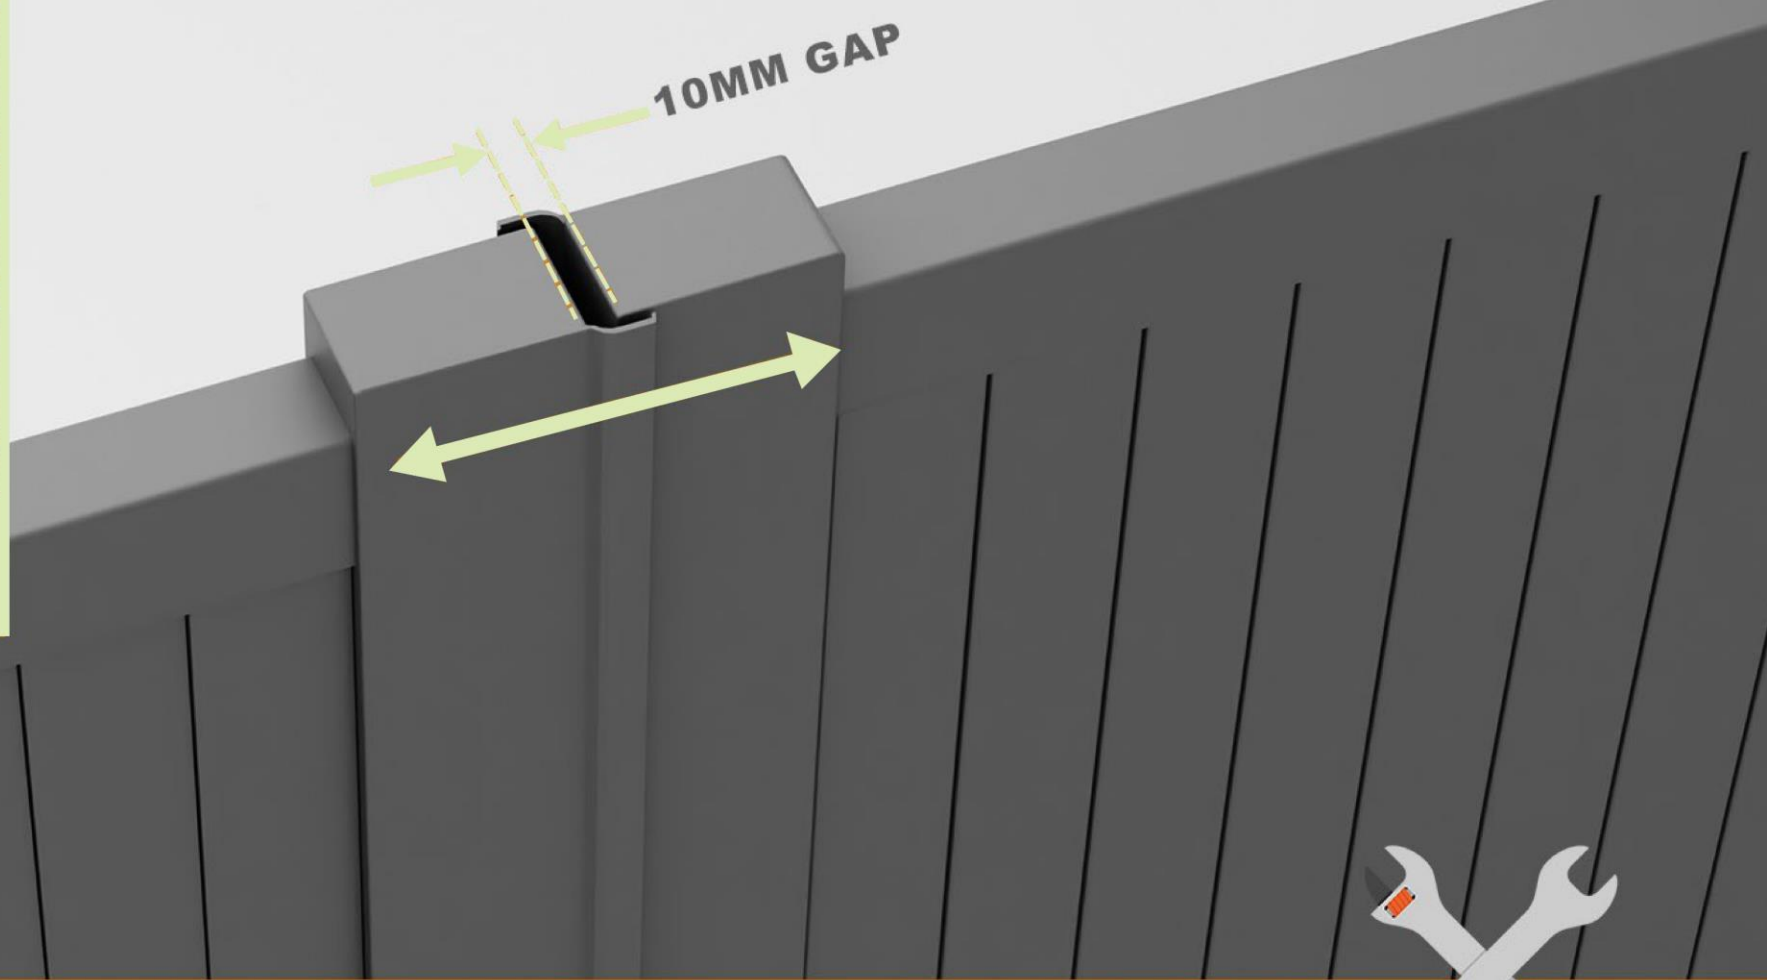

**10MM GAP**

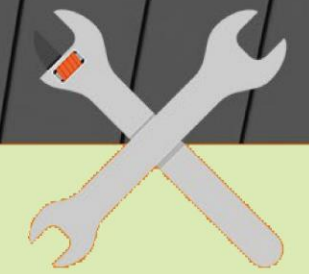

# 11. ADJUST UPPER HINGES



**12. FIT COVERS - 2 X PLACES**

# PROJECT COMPLETE

