

1. CHECK GATE WIDTH







2: MARK & DRILL LOWER BRACKET

NOTES

**2 X PLACES
10MM DRILL**

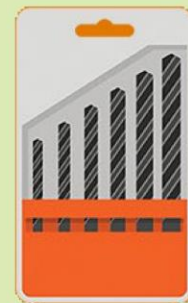

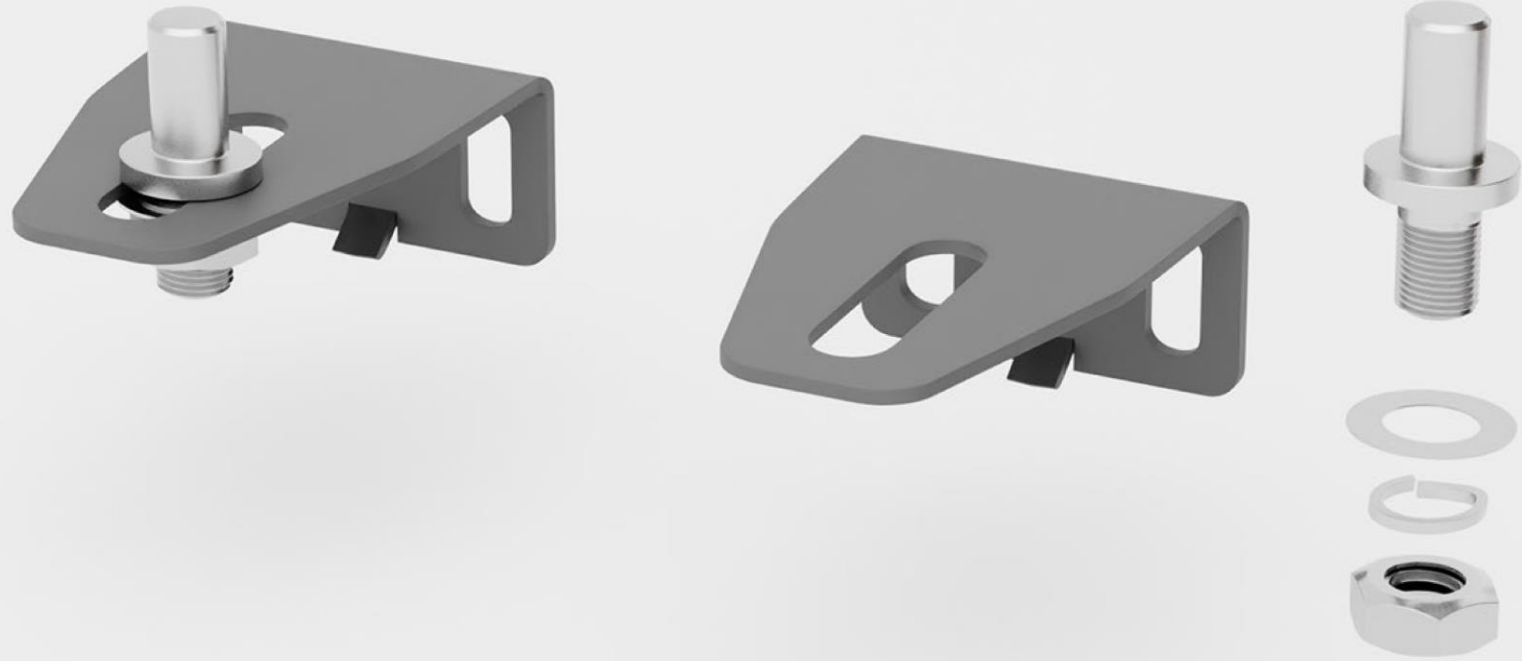


3. PRE-ASSEMBLE LOWER SPIGGOT





**M10 BOLTS
2 x PLACES**

4. FIX LOWER HINGE TO FLOOR

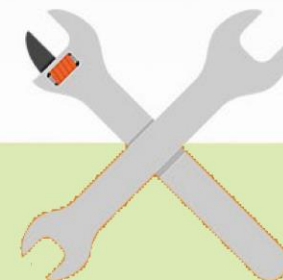

5. TWO PERSON LIFT ADVISED

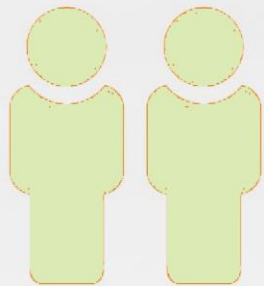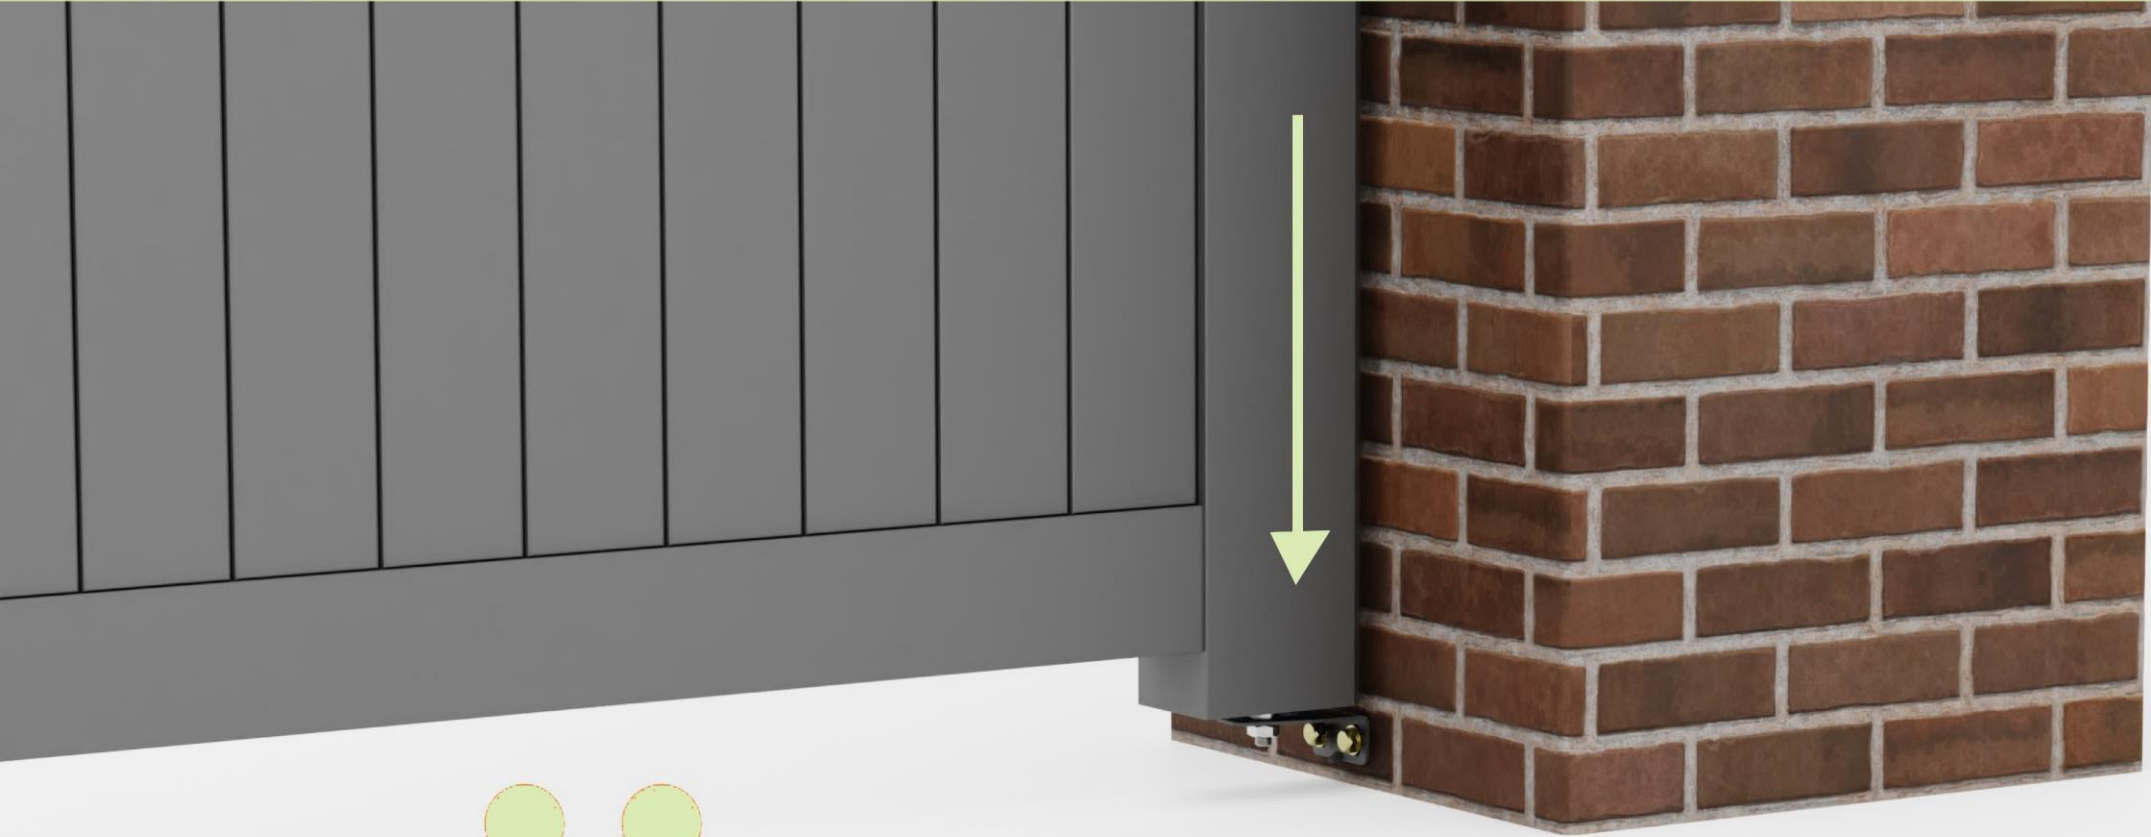

TWO PERSON LIFT ADVISED


6. ASSEMBLE UPPER SPIGGOT



NOTES


OPPOSITE TO LOWER BRACKET

7. MARK UPPER BRACKET

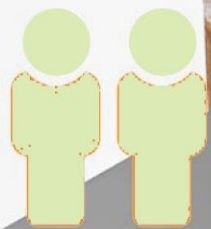

NOTES

**HOLD GATE SQUARE
MARK 2 X PLACES**

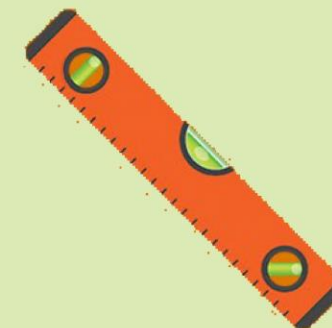




8. DRILL HOLES X 2

NOTES


10MM DRILL
50MM MIN DEPTH

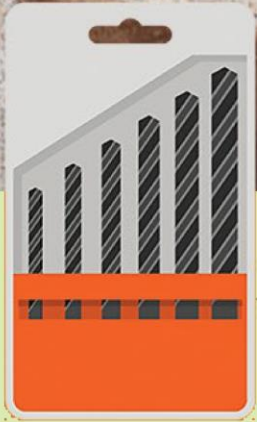





9. FIX UPPER HINGE

**REPEAT
STEP 2 TO 9
FOR THE LH GATE**

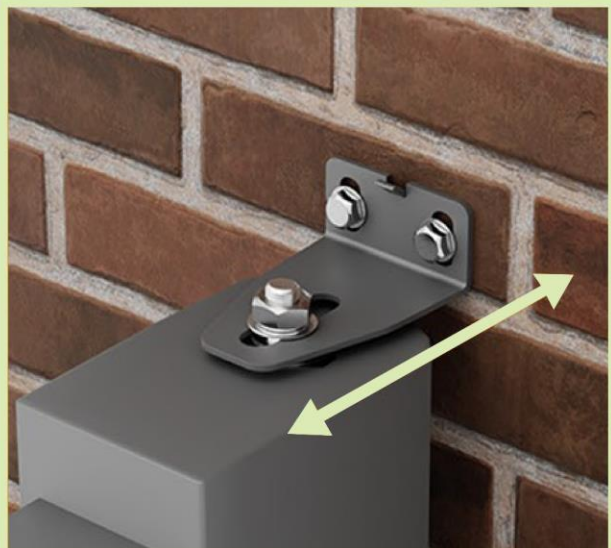

2 X PLACES

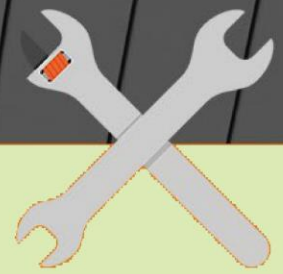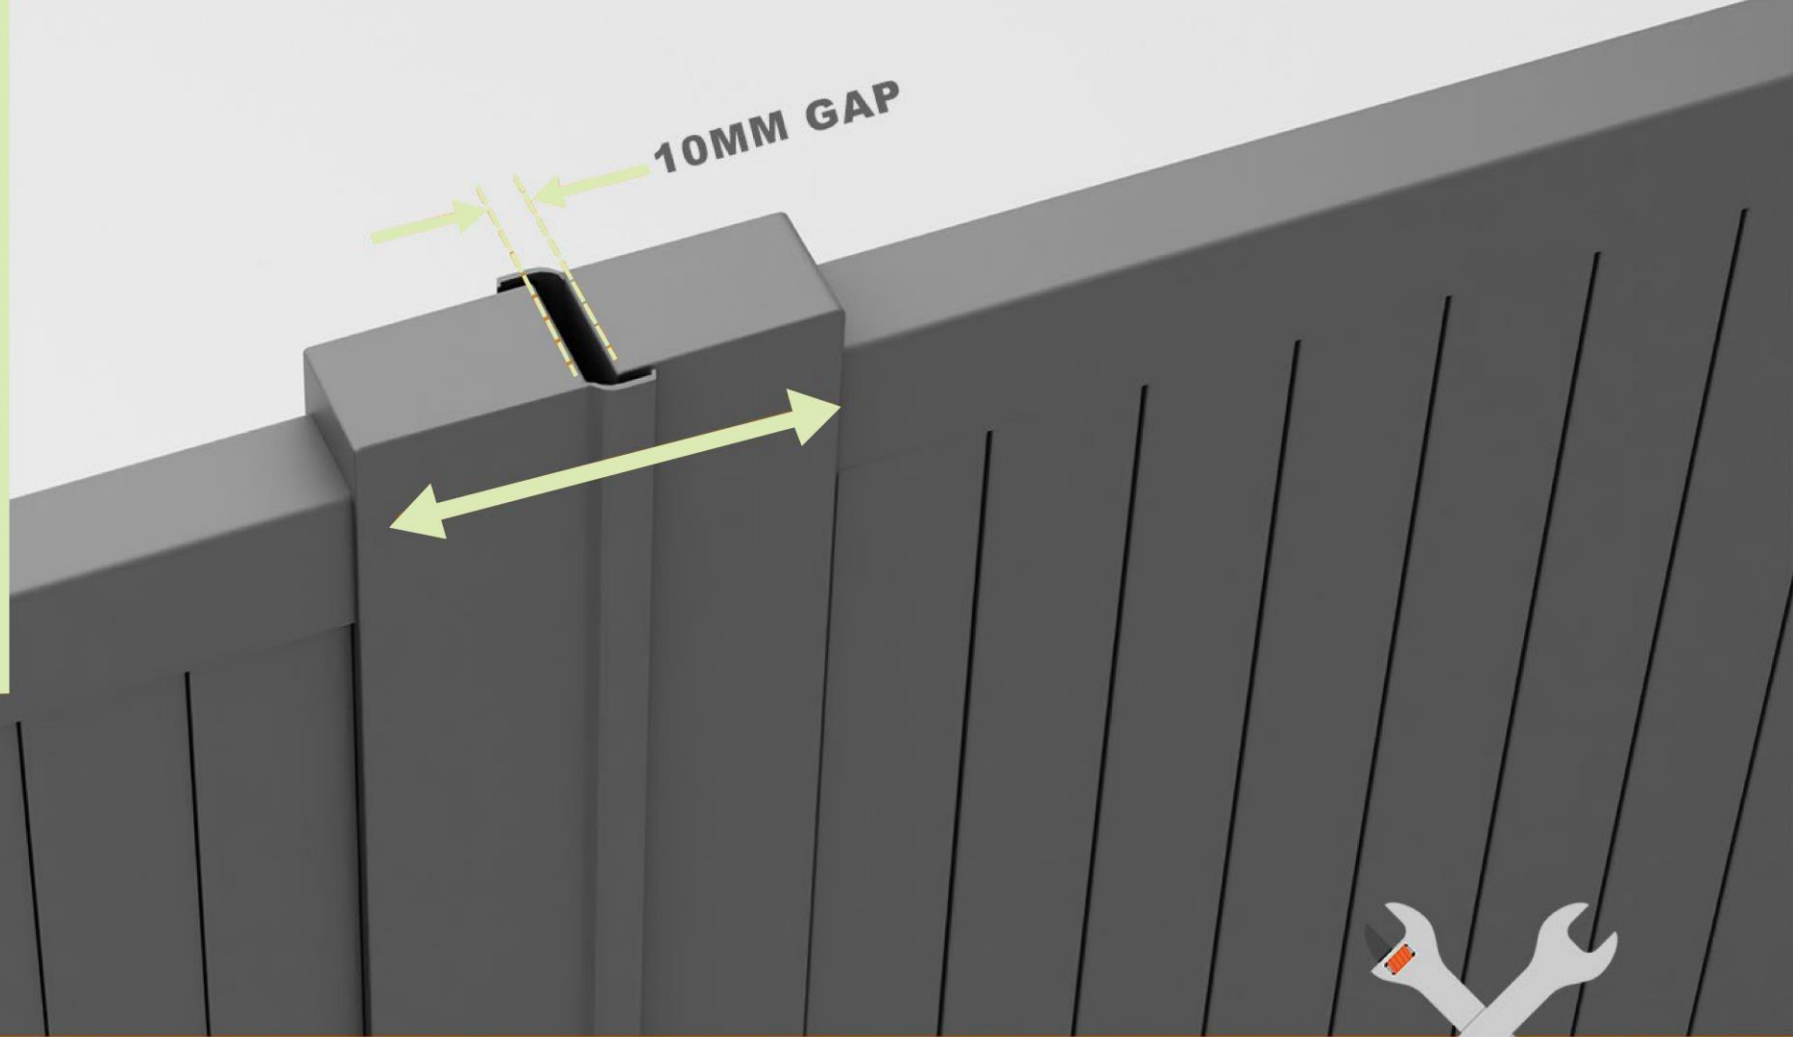

11. ADJUST UPPER HINGES



12. FIT COVERS - 4 X PLACES

PROJECT COMPLETE

