

ecomposite

SUPERIOR RANGE

User Manual



ecomposite

ecomposite

For Installation Help or Information Contact Us At:


www.ecompositeproducts.co.uk sales@ecompositeproducts.co.uk 0800 599 9667

© EComposite Products 2019, All Rights Reserved

English

INTRODUCTION

Introducing the Venetian fence assembly manual. In this manual, we will show you how to assemble your own Venetian fence. Before beginning the assembly, make sure that there is ample room for installing and assembling your product.

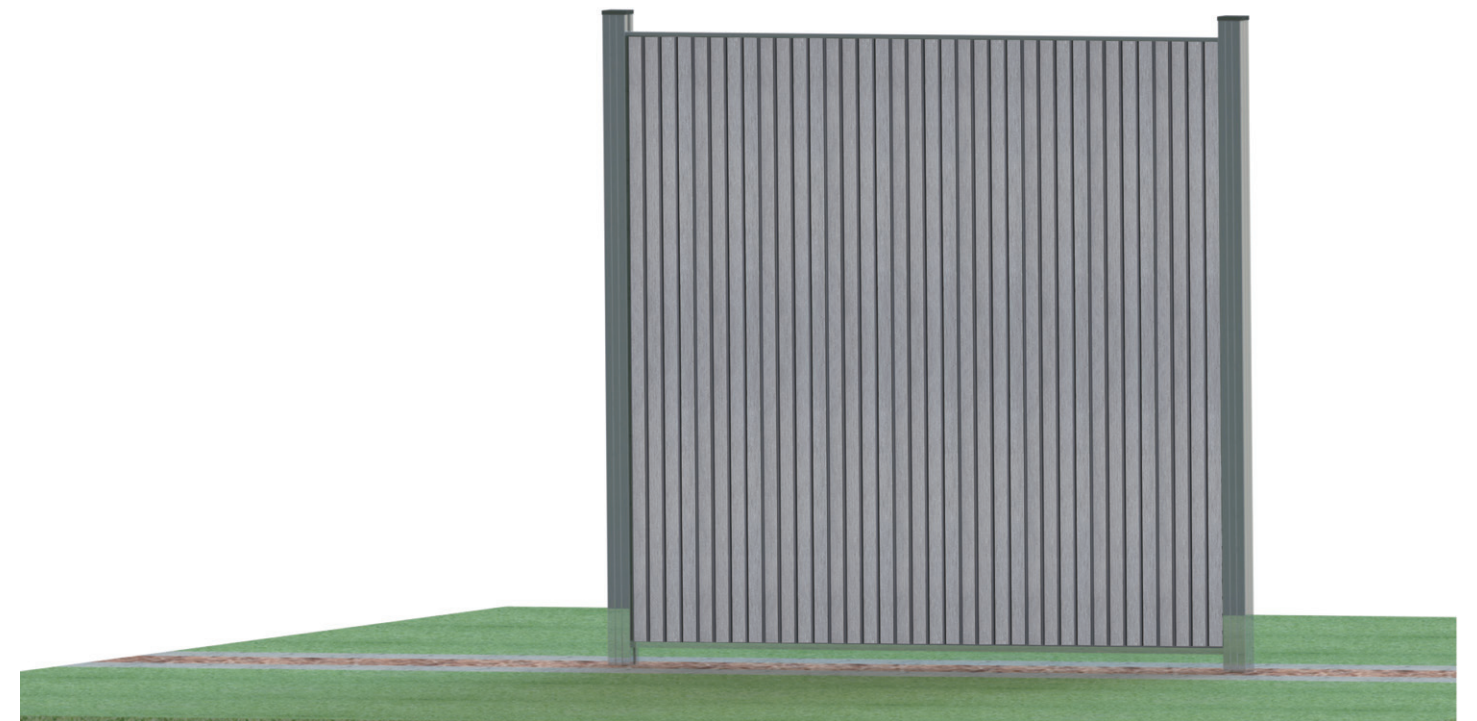

ecomposite

For Installation Help or Information Contact Us At:


📍 www.ecompositeproducts.co.uk ✉ sales@ecompositeproducts.co.uk ☎ 0800 599 9667

PARTS & TOOLS CHECK LIST

Ensure that the following parts are included with your sample bike. These are crucial components that will be the mainframe of your entire assembly.



Tape Measure



Spirit Level




Hack Saw





Rubber Mallet




Shovel

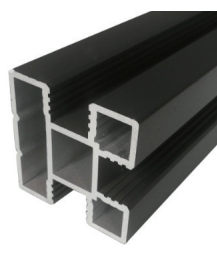


Part No. 1 Aluminum Post
QTY: 1 + 1 End Post

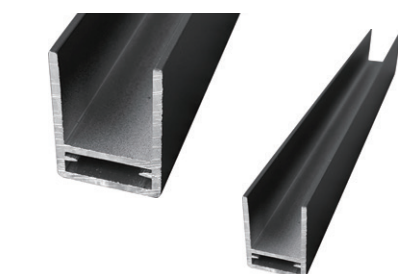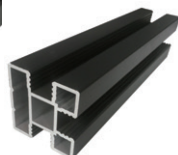

Part No. 2 Aluminum Top Rail
QTY: 1

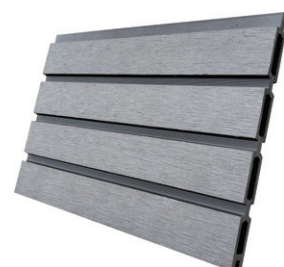

Part No. 3 WPC Panel
QTY: 9

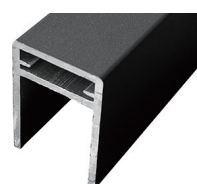

Part No. 4 Aluminum Bottom Rail
QTY: 1



Part No. 5 Aluminum Cover Strip



Part No. 6 Post Cap
QTY: 1



Part No. 7 L corners&screws
QTY: 4 Lcorners
16 Screws


ecomposite

For Installation Help or Information Contact Us At:

www.ecompositeproducts.co.uk sales@ecompositeproducts.co.uk 0800 599 9667


INSTRUCTIONS

Step 1 - Aluminum Post Installation

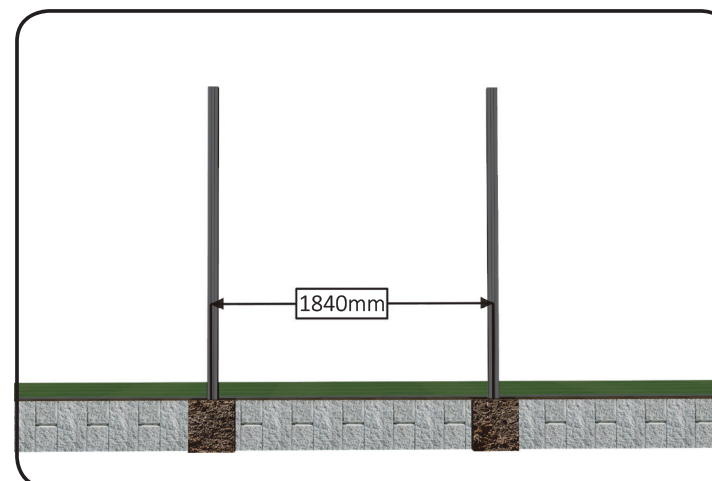


1. Place two posts into the desired location

Begin step one by placing two Aluminum Posts, Part One, at a distance of 1840 millimeters from center to center

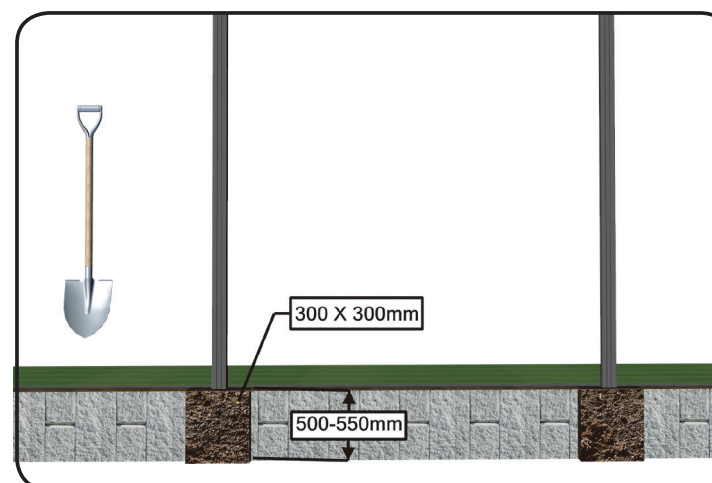

2. Mark the locations of the posts

Next, mark the location and use a shovel to dig two 300 by 300 by 500 millimeter deep holes. Insert both Aluminum Posts into the 500 millimeter deep holes and make sure both posts stand 1900 millimeters above ground level.

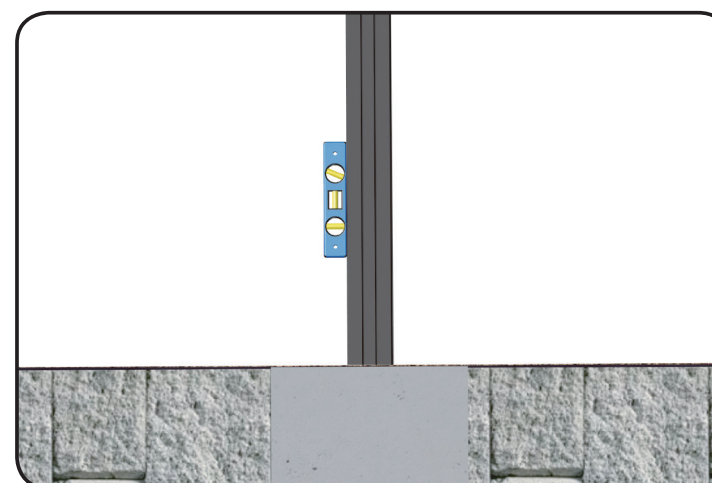

3. Fill the locations with concrete

Once the placement of the posts and the depth of the holes are verified, fill the holes with concrete and use a spirit level to ensure the posts are level front and side. Make sure both posts remain straight and parallel to one another.


ecomposite

For Installation Help or Information Contact Us At:

www.ecompositeproducts.co.uk sales@ecompositeproducts.co.uk 0800 599 9667


INSTRUCTIONS

Step 2 - Installation of the Aluminum Bottom Rail

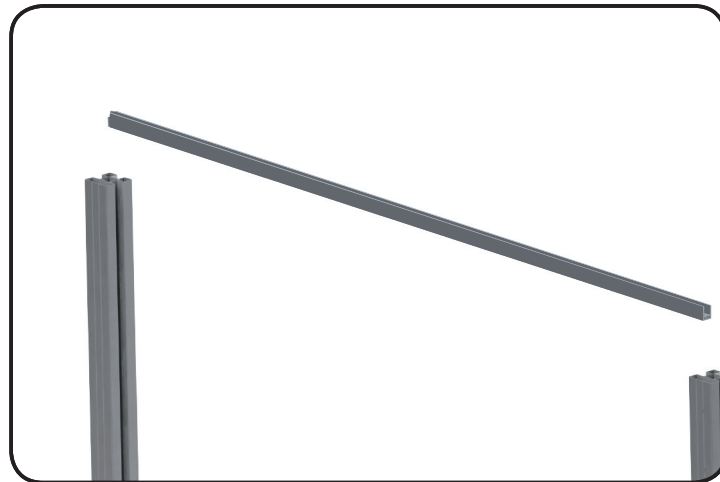


1. Insert the bottom rail

Begin Step Two by placing the Aluminum Bottom Rail, Part Four, between the two Aluminum posts with the flat side facing down.

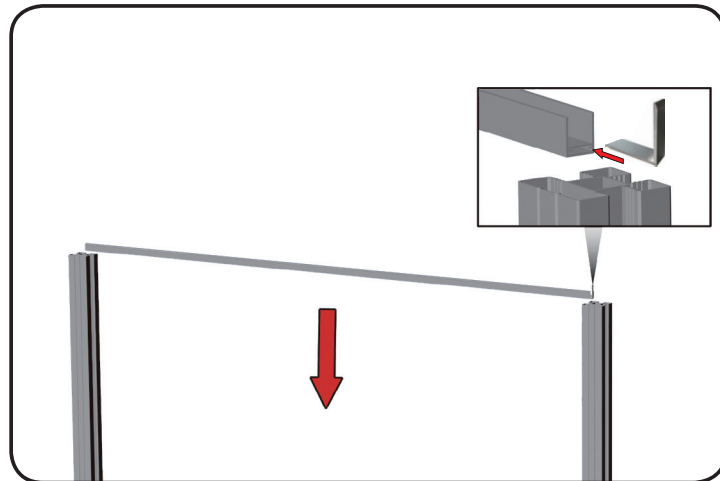

2. Slide the bottom rail

Insert the L corner into the two ends of bottom rail, then slide the Rail all the way to the floor and make sure it lays flat on the ground.

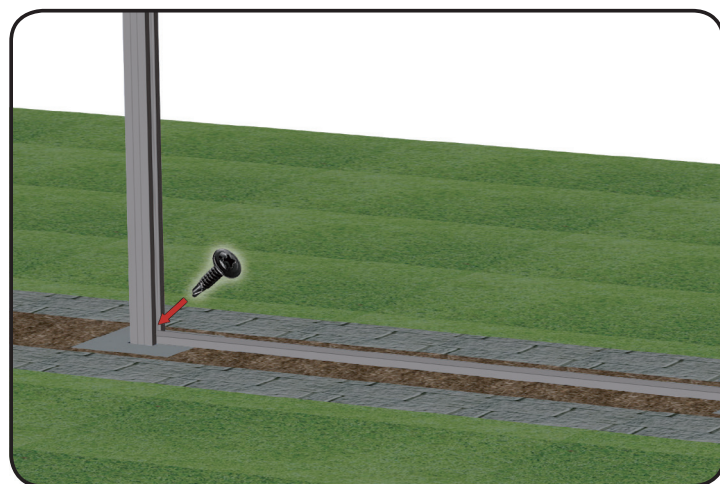

3. Make sure the bottom rail is secured

Make sure the rail slides to the bottom, and that the rail is tightly secured, fix the L corner with post by screws.


ecomposite

For Installation Help or Information Contact Us At:

5 www.ecompositeproducts.co.uk sales@ecompositeproducts.co.uk 0800 599 9667


INSTRUCTIONS

Step 3 - Installing the WPC Panels

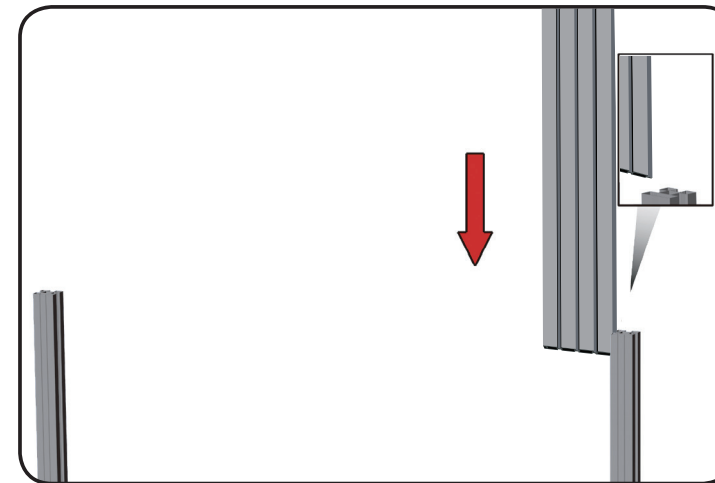


1. Line up the WPC Panel

Begin Step Three by placing one WPC panel between the two aluminum posts. The notched section of the panel goes face down while the extruded side goes face up

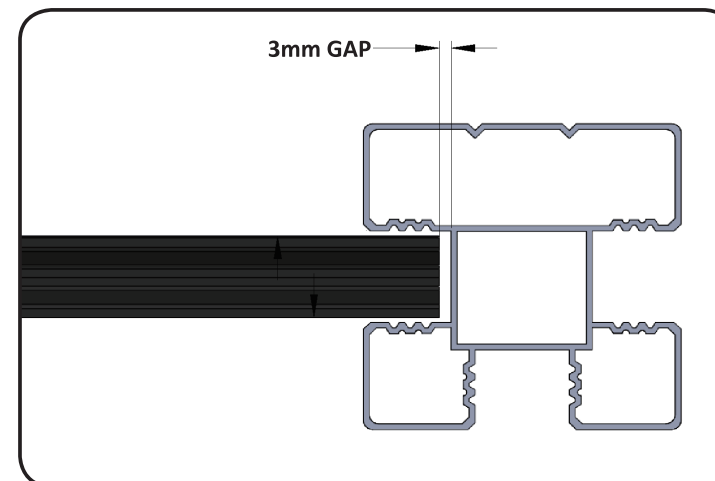

2. Check for proper spacing

Before pushing the panel down, ensure that there is a gap of 3 millimeters worth from the sides, as shown

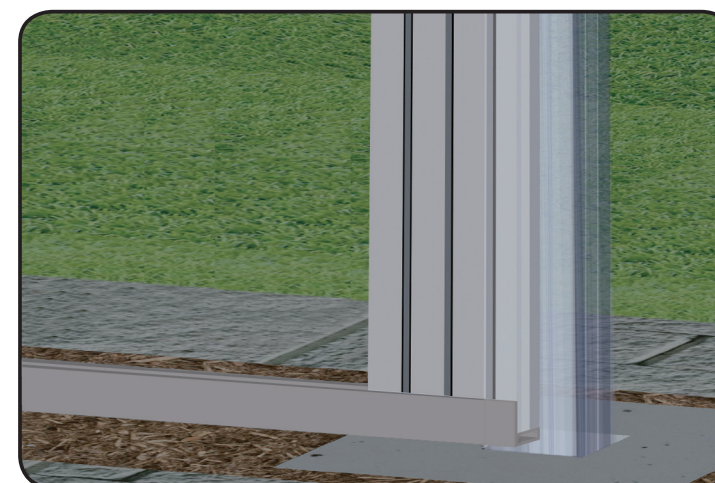

3. Slide the panel downward

Next, slide the panel all the way to the bottom. The notched part of the panel must slide into the bottom aluminum rail and lock into place

Repeat these steps for the remaining WPC Panels


ecomposite

For Installation Help or Information Contact Us At:

www.ecompositeproducts.co.uk sales@ecompositeproducts.co.uk 0800 599 9667


INSTRUCTIONS

Step 4 - Installation of the Top Aluminum Rail

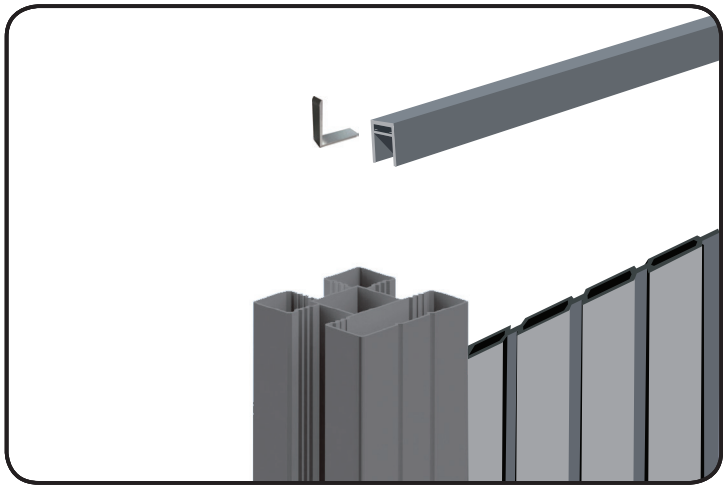


1. Line up the top rail

Begin step four by placing the aluminum top rail, Part Two, between both aluminum posts.

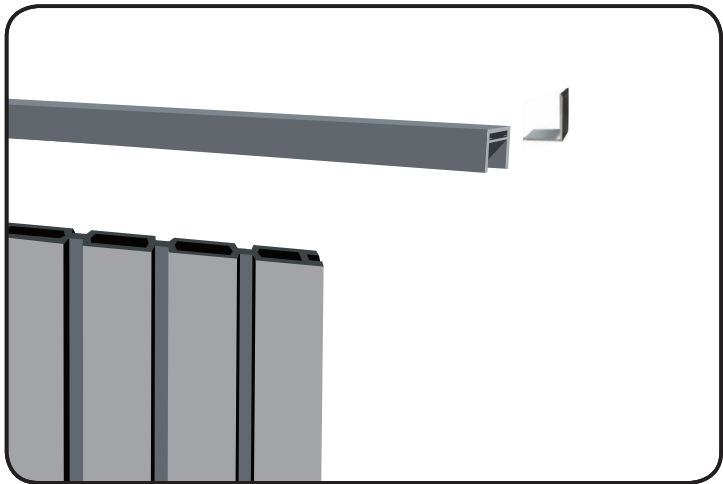

2. Check for proper alignment

Place the rail with the notched face pointing down and the flat face pointing up. Insert the L corner into the two ends of the top rail.

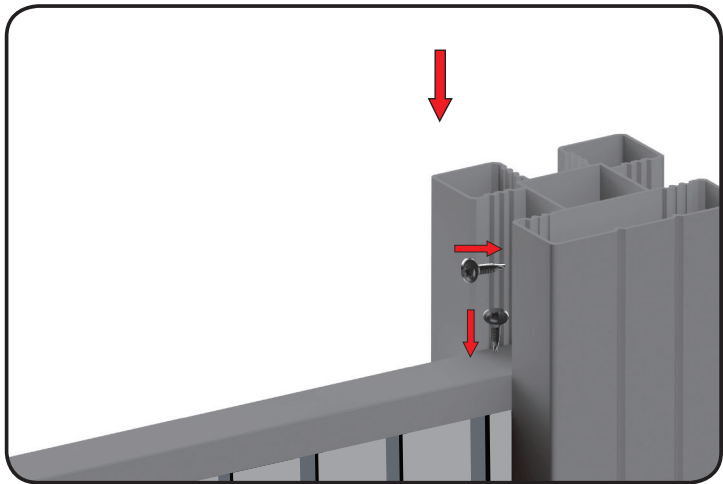

3. Ensure the rail is secured

Slide the rail down and lock into place on top of the WPC panel. Ensure that the rail is tightly secured. Fix the L corner with the post and top rail by screws.


ecomposite

For Installation Help or Information Contact Us At:

7 www.ecompositeproducts.co.uk sales@ecompositeproducts.co.uk 0800 599 9667


INSTRUCTIONS

Step 5 - Optional Aluminum Cover Strip Installation

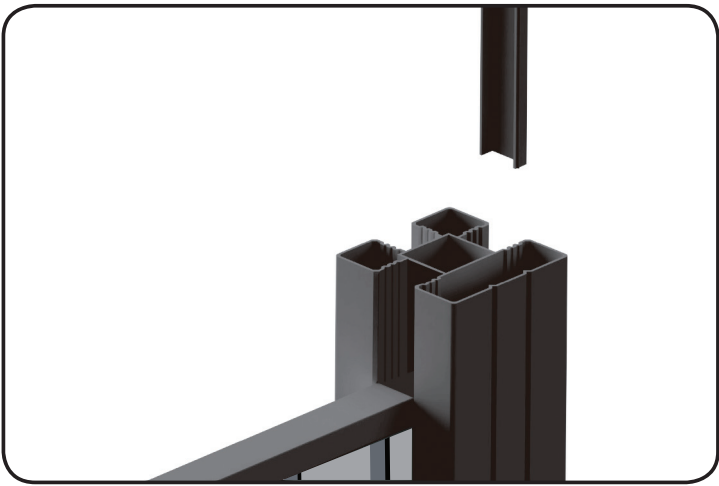


1. Line up the strips

The cover strips are optional and are used to cover the fence ends. Begin step five by placing the cover strips at each end of the aluminum post and slide all the way down.

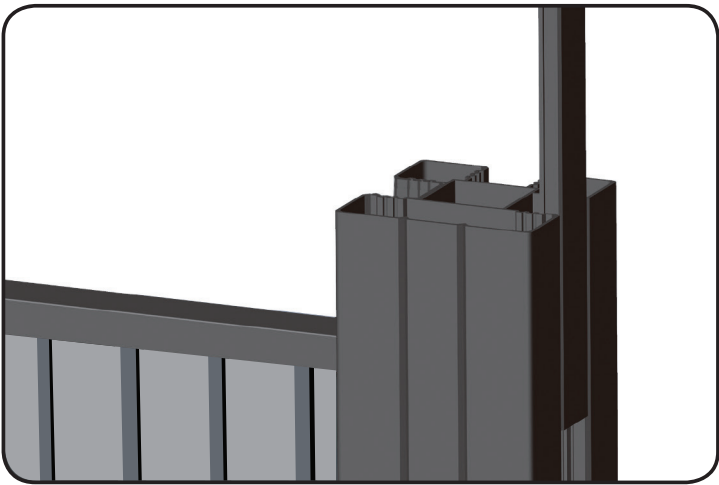

2. Check for proper alignment

Place the strip with the notched side facing inward and the flat side facing outward.

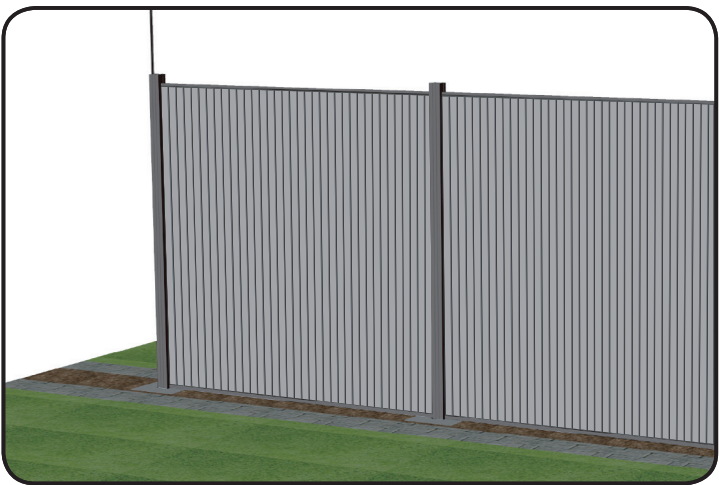

3. Trim if needed

If the cover strips are too long and stick out you might have to trim them using a hacksaw.

ecomposite

For Installation Help or Information Contact Us At:


www.ecompositeproducts.co.uk sales@ecompositeproducts.co.uk 0800 599 9667

INSTRUCTIONS

Step 6 - Post Cap Installation


1. Place the caps

Begin Step six by placing a post cap on top of each of the aluminum posts.

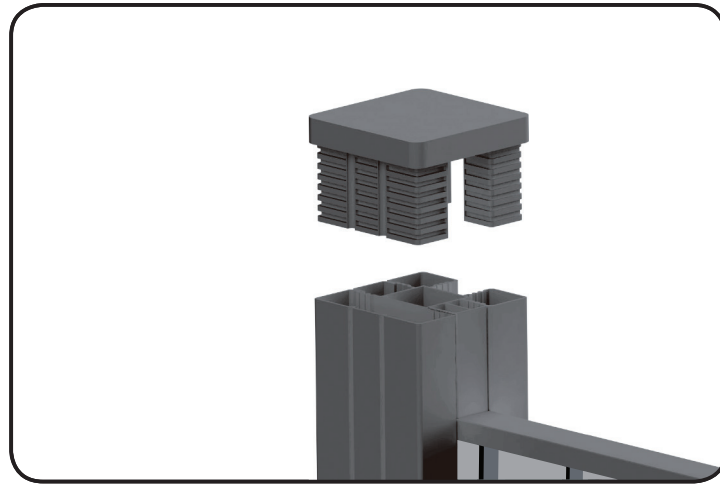

2. Hammer the caps into place


Slightly slide the cap into the post and gently tap them into place using a rubber mallet. Repeat this for each aluminum post installed.

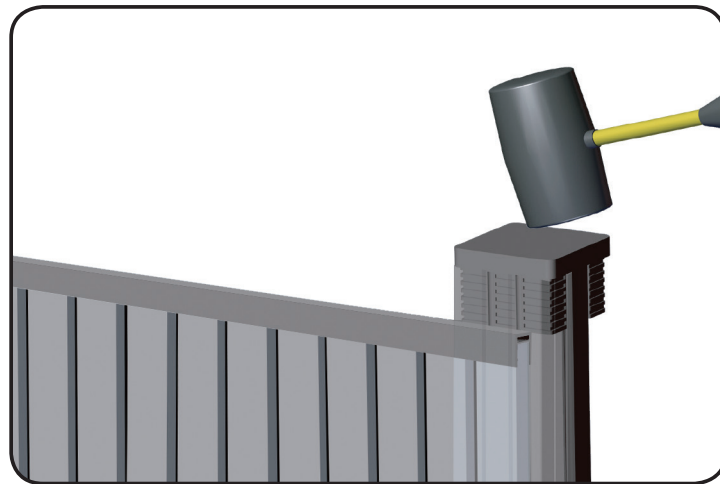

3. Verify fence has parts and hardware secured

Congratulations, you have completed the assembly of the Venetian fence! Before using your new fence, verify that all parts and hardware are intact, in accordance to the owner's manual.

Enjoy your new Venetian fence!

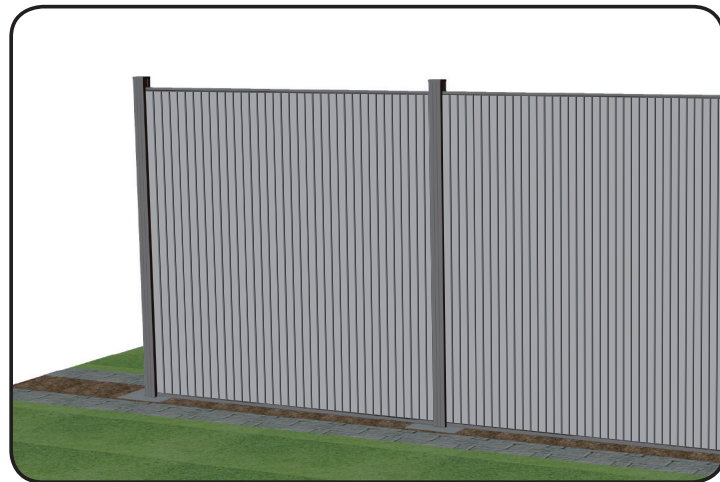

ecomposite

For Installation Help or Information Contact Us At: